

Oral inflator hose routing option  
OMS Deep Ocean Wing  
OMS Trieste Wing

Divers have two options for hose routing

- 1) standard position (as Shipped)
- 2) Routing to standard over the shoulder


# OMS wings are shipped with the hoses installed as shown



This configuration allows the diver to keep hoses Very close to their torso. Allowing the diver to add Gas to the wing with their left hand close to their body.

Venting is then accomplished by utilizing the bottom Dump valve

# An alternate method is to route the hose over the divers shoulder

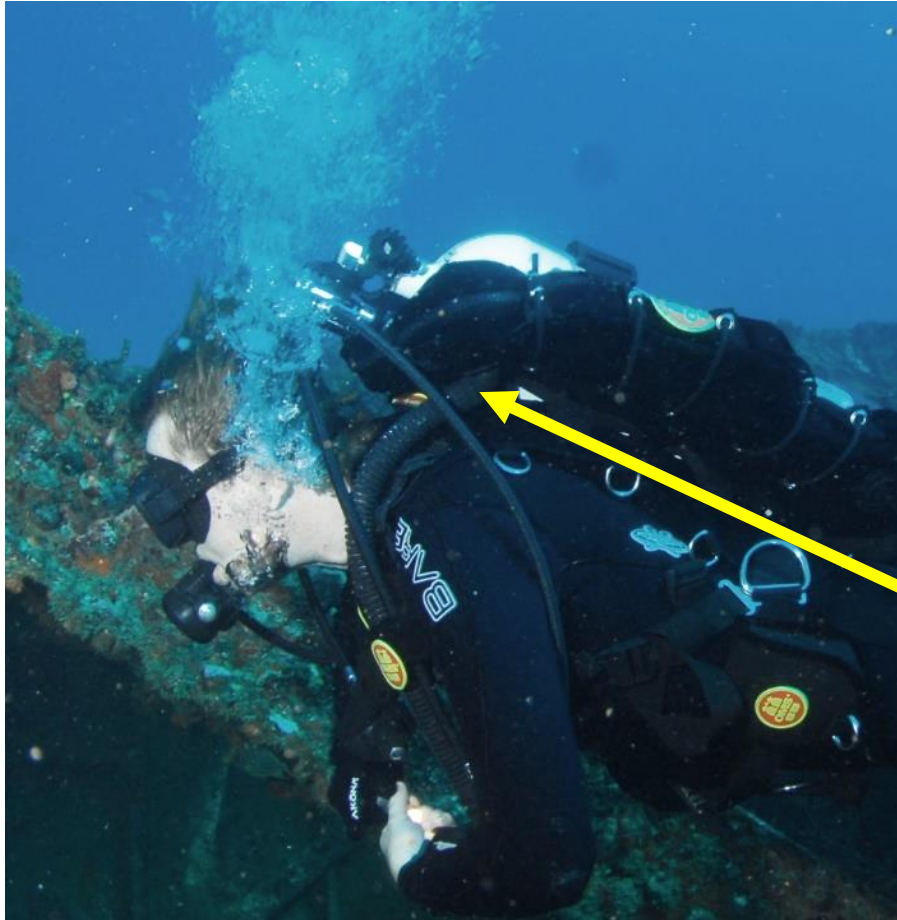

This configuration is an option that some divers prefer

The hose routing is still “clean” and close to the divers body

To set the inflator hose in this position use the Following procedure.



- 1) Loosen the Locking ring
- 2) Rotate the elbow 180 degrees  
the elbow is “keyed” so be sure to align properly
- 3) Inflate the wing completely to ensure that there is no leakage



Key



# Original



# Optional





Inflator hose now rides over the shoulder  
down the shoulder strap and through epaulet  
this will increase hose length.

